

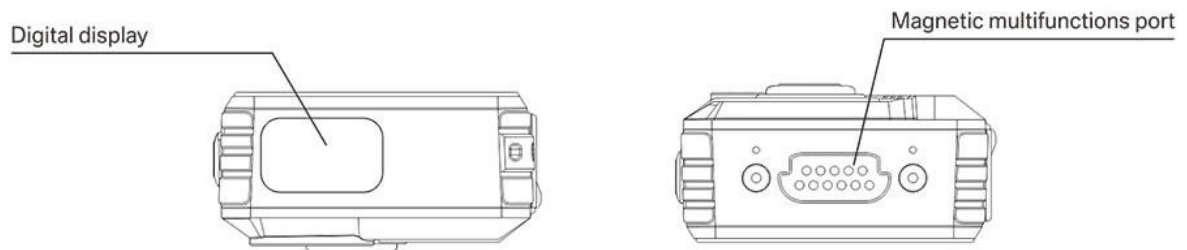


10-8 VIDEO

DIGITAL EVIDENCE SOLUTIONS

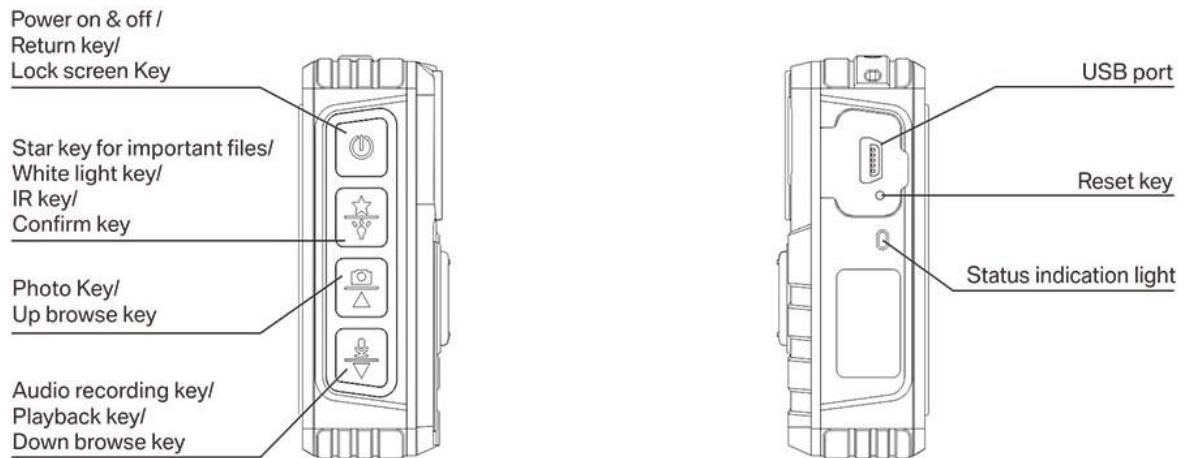

Body Worn Camera Quick Start Guide

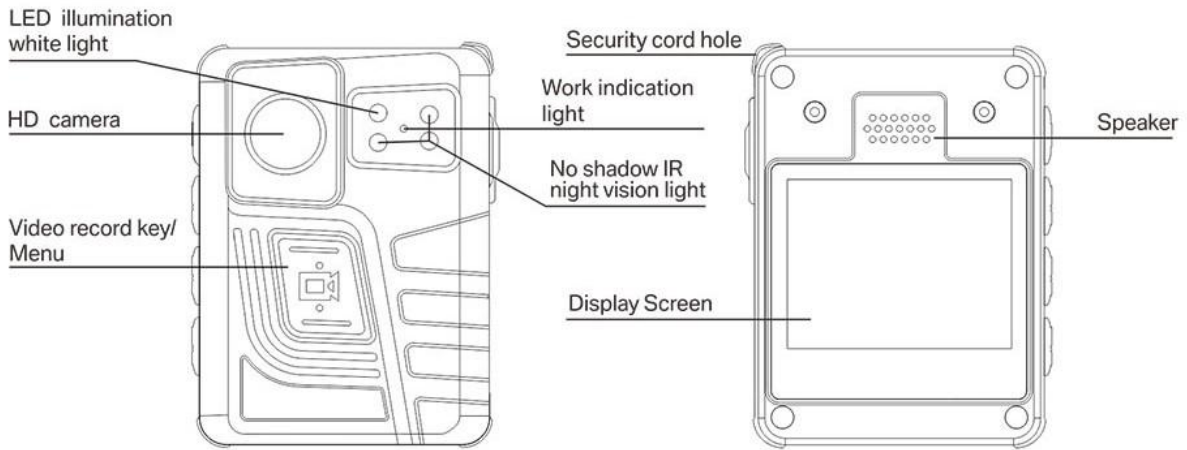

Recording Options

-To START a recording when the camera is powered ON, press the RECORD button on the front of the camera ONE time. The camera will beep once and vibrate. The front LED will flash RED during recording.

-To STOP a recording TAP then PRESS AND HOLD the RECORD button on the front of the camera. The camera will beep twice and vibrate.

-To START a recording when the camera is powered OFF, press and hold the RECORD button continuously for 5(FIVE) Seconds. The camera will boot up and start recording within 1 second of booting up. The front LED will flash RED during recording.

******PLEASE NOTE, THERE WILL BE NO PRERECORD FOR VIDEOS STARTED IN THIS MANNER******

-To take a photo DURING a recording, remove the body camera from your uniform, tap the power button to unlock the camera, and press the PHOTO(camera icon) button on the side of the camera. You can take multiple photos during a video recording.

-To take a photo separately from a recording, remove the camera from your uniform, tap the power button to unlock the camera, and press the PHOTO(camera icon) button on the side of the camera.

-To MUTE audio during a video recording, DOUBLE PRESS the AUDIO(mic icon) button on the side of the camera. To UNMUTE, repeat this process. If you do not unmute the recording before stopping the recording, the camera will automatically turn off the mute function for the next recording.

-To start and AUDIO recording, tap the power button to unlock the camera, and then press the AUDIO(mic icon) button on the side of the camera. The front LED will flash YELLOW during recording.